

SPC *Installation Guide*

LOCKING TECHNOLOGY INSTRUCTIONS

Before Installation

This versatile SPC flooring is designed for easy installation with a simple click-lock system, making it suitable for a variety of floor types. Before installation ensure the surface is thoroughly cleaned, free of dust, debris, and other objects, and confirm that it is properly levelled. If the ground is made of reinforced cement, apply a self-levelling compound beforehand to ensure a smooth surface. For solid wood or composite wood floors, carefully check for any height differences between the existing boards before laying the SPC floor to prevent uneven installation. Avoid installing SPC flooring over soft surfaces like carpets or cushioned floors.

Lock System and Precautions

The lock catch of this product is designed as illustrated in the picture below. It features an interlocking mechanism that connects the upper and lower lock catches of adjacent planks, eliminating the need for additional nails or fasteners.



This lock system effectively prevents issues with height differences and gaps between planks.

Installation Steps

Start the installation from the corner of the wall, maintaining a 10mm gap between the board and the wall for an expansion joint. Ensure that there are expansion gaps around the entire room where the floor is being installed.


Additionally, leave at least a 13mm gap between the door and the floor to prevent any rubbing or wear when the door is opened and closed.



1. Connect the long side at an angle



2. Slide until short sides touch and drop

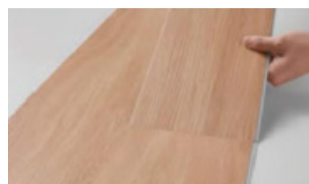

3. Each floor tile is connected with a unique lock, which makes it easy to install and can be removed at will.



4. Use a soft-faced hammer to gently tap the plank edge and ensure it properly locks the planks in place.

